

Busbi Cable Lock Accessory. User Instructions

Note: This cable lock is intended for use in preventing unauthorised use of the Busbi Wasp escooter, and not specifically as an anti-theft device.

Setting the desired combination:



Ensure the factory setting '000' is centred in line with the interval marks on the casing.



Insert an implement such as an instrument screwdriver into the hole located on the edge of the lock casing.



Keeping upward pressure on the screwdriver, turn the thumbwheels to the desired combination centred in line with the interval marks on the casing.



Release and remove the screwdriver. Scramble the thumbwheels and then test the opening and closing of the lock using the set combination.